



Toolholders for inserts CCGT, CCGW, CCMT and CCMW

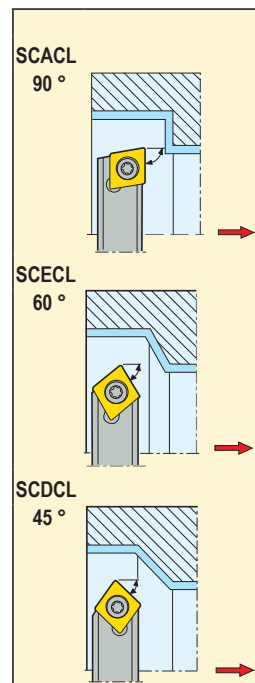

- For inserts programme, see page(s) 394-398, 452, 480-481
- GAMO° = Rake angle, LAMS° = Inclination angle
- For holder code key, see page(s) 15-16

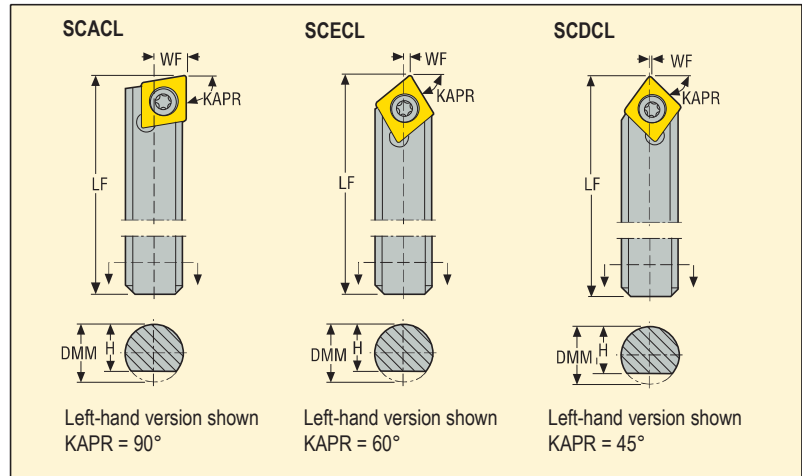

	Designation	Dimensions in mm				GAMO°	LAMS°	KG	
		DMM	H	LF	WF				
06	S08A-SCACL06	8	6,3	32	4,2	0	0	0,1	CC..0602..
	S10C-SCACL06	10	8,3	50	5,2	0	0	0,1	CC..0602..
09	S12D-SCACL09	12	10,3	60	6,7	0	0	0,1	CC..0602..
06	S08A-SCECL06	8	6,3	32	1,5	0	0	0,1	CC..0602..
	S10C-SCECL06	10	8,3	50	2,4	0	0	0,1	CC..0602..
09	S12D-SCECL09	12	10,3	60	2,3	0	0	0,1	CC..09T3..
06	S08A-SCDCL06	8	6,3	32	0,3	0	0	0,1	CC..0602..
	S10C-SCDCL06	10	8,3	50	1,2	0	0	0,1	CC..0602..
09	S12D-SCDCL09	12	10,3	60	0,5	0	0	0,1	CC..09T3..

Spare Parts, Parts included in delivery

For size	Insert key	Insert screw
S08A-...06	T07P-2	C02505-T07P
S10C-...06	T07P-2	C02506-T07P
...09	T15P-2	C04008-T15P

Please check availability in current price and stock-list