



## Toolholders for inserts WNGA, WNGG, WNMA, WNMG and WNMM

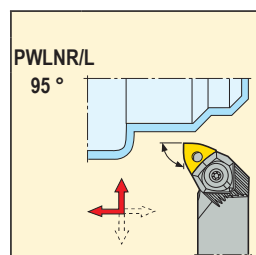

- For inserts programme, see page(s) 447-451, 478
- GAMO° = Rake angle, LAMS° = Inclination angle
- For holder code key, see page(s) 15-16

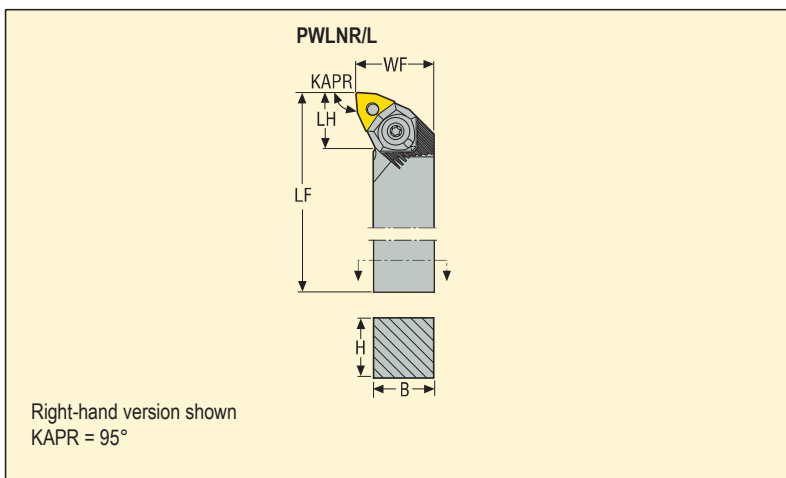

	Designation	Dimensions in mm					GAMO°	LAMS°	KG	
		H	B	LF	WF	LH				
06	PWLNR1616H06	16	16	100	20,0	21	-6	-6	0,2	WN..0604..
	PWLNR2020K06	20	20	125	25,0	21	-6	-6	0,4	WN..0604..
	PWLNR2525M06	25	25	150	32,0	21	-6	-6	0,7	WN..0604..
	PWLNR3225P06	32	25	170	32,0	21	-6	-6	1,1	WN..0604..
	PWLNR3232P06	32	32	170	40,0	21	-6	-6	1,4	WN..0604..
	PWLNL1616H06	16	16	100	20,0	21	-6	-6	0,2	WN..0604..
	PWLNL2020K06	20	20	125	25,0	21	-6	-6	0,4	WN..0604..
	PWLNL2525M06	25	25	150	32,0	21	-6	-6	0,7	WN..0604..
	PWLNL3225P06	32	25	170	32,0	21	-6	-6	1,1	WN..0604..
PWLNL3232P06	32	32	170	40,0	21	-6	-6	1,4	WN..0604..	
08	PWLNR2020K08	20	20	125	25,0	27	-6	-6	0,4	WN..0804..
	PWLNR2525M08	25	25	150	32,0	27	-6	-6	0,8	WN..0804..
	PWLNR3225P08	32	25	170	32,0	27	-6	-6	1,1	WN..0804..
	PWLNR3232P08	32	32	170	40,0	27	-6	-6	1,3	WN..0804..
	PWLNL2020K08	20	20	125	25,0	27	-6	-6	0,4	WN..0804..
	PWLNL2525M08	25	25	150	32,0	27	-6	-6	0,8	WN..0804..
	PWLNL3225P08	32	25	170	32,0	27	-6	-6	1,1	WN..0804..
PWLNL3232P08	32	32	170	40,0	27	-6	-6	1,3	WN..0804..	

### Spare Parts, Parts included in delivery

For size	Insert shim	Setting screw	Shim pin	Wedge clamp	Wedge key	Wedge screw	Shim key
...H06	WAE060312	L82511-T07P	PP1409-T09P	WNW06HD	T20P-7	WS1920-T20P	T09P-2
...06	WAE060312	L82511-T07P	PP2109-T09P	WNW06HD	T20P-7	WS1920-T20P	T09P-2
...08	WAE080412	L82511-T07P	PP2015-1-T15P	WNW08HD	T25P-7	WS2325-T25P	T15P-2

### Accessories\*

Please check availability in current price and stock-list

\* To be ordered separately  
 Shim WAE080312 for insert WNM.0806..., to be ordered separately  
 Wedge WNW08 for insert WNM08..., to be ordered separately